


Installation note:
Tightening torque [34 21 2AZ](#).

81 ft*lbs

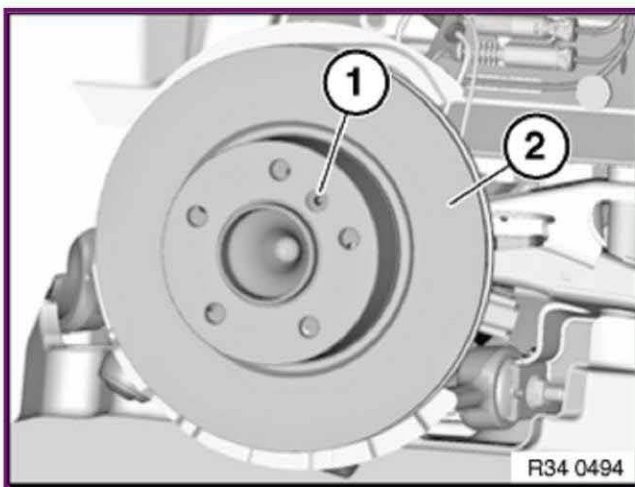

Important!

To release brake disc: Do not under any circumstances strike friction ring with a hammer or similar!

If necessary, carefully tap on base of brake disc chamber with a rubber mallet.

Clean contact surface of brake disc at wheel hub thoroughly and remove traces of corrosion.

Unevenness on contact surface may result in distortion of brake disc!

Release screw (1) and remove brake disc (2).

Installation note:
Replace screw.

Tightening torque [34 21 1AZ](#).

12 ft*lbs